



# HMGP-YA1016

## Fitment Guide

Version 1.2N17

## Items provided in kit


- HM GP-YA1016
  - HM GP-YA1016 SR loom
  - HM GP-YA1016 coil loom
  - USB programmer lead
  - USB storage key
- 
- HMGP Config software
  - Latest Programme file for HMGP-YA1016
  - HMGP User Guide
  - HMGP-YA1016 Fitment Guide

### Step 1:


### Installing the HMGP-YA1016 Coil Loom



Attach the HM coil loom to the RED/BLACK wire on the coils with the spade connectors provided.

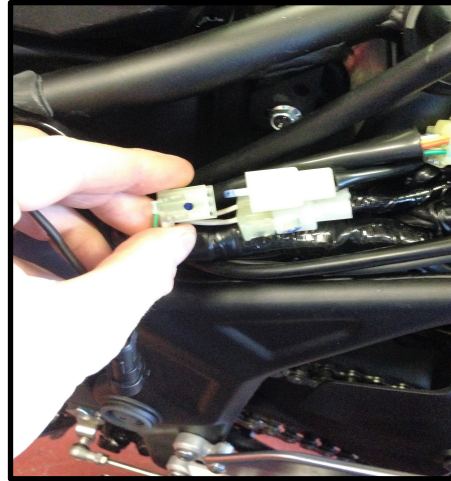**Step 2:****Installing the HMGP-YA1016 SR Loom**

Connect the HM SR loom to crank sensor plug.

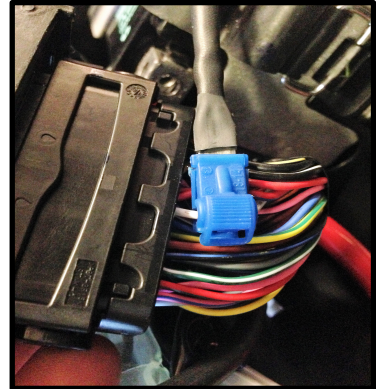

Connect the HM SR loom to the WHITE Speed sensor wire going into the ECU with the splice connector included in kit.

**Step 3:****Installing the HMGP-YA1016**

The HM GP shifter can now be fitted and connected into the bikes coil, speed and RPM looms. We advise that the Earth lead is connected to the negative terminal of the battery.

**OPTIONAL EXTRA**

- HMGP-YA1016 - Speed Sensor Interface  
(Part No: 5060544240930)

**If you have any questions or  
require any help, please call our  
tech team on;**

**TEL: +44 (0)1795 429168**

**Email: [info@hmquickshifter.com](mailto:info@hmquickshifter.com)**