



HMGP-KA1712

Fitment Guide

Version 1.2N17

Items provided in kit

- HM GP-KA1712
 - HM GP-KA1712 SR loom
 - HM GP-KA1712 Coil loom
 - USB programmer lead
 - USB storage key
-
- HMGP Config software
 - Latest Programme file for HMGP-KA1712
 - HMGP User Guide
 - HMGP-KA1712Fitment Guide


Step 1: **Installing the HMGP-KA1712 Coil Loom**




The GP-KA1712 coil loom needs to be fitted onto the plug top coils, located above the spark plugs. Just unplug the original connectors > Plug in the connectors from the GP-KA1712 coil loom in and then reconnect the original connectors.

Step 2:

Installing the HMGP-KA1712 SR Loom

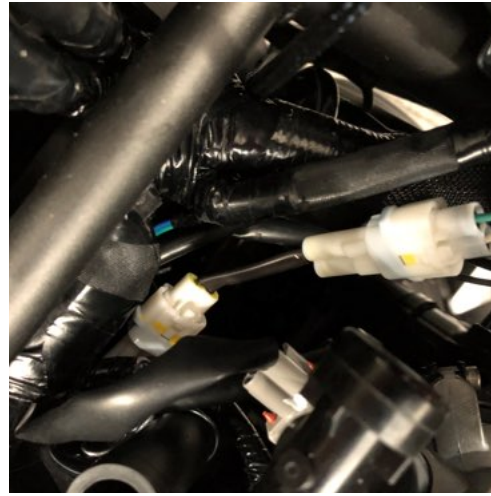

Connect the HM SR loom to crank sensor plug, found in rubber boot under fuel tank.

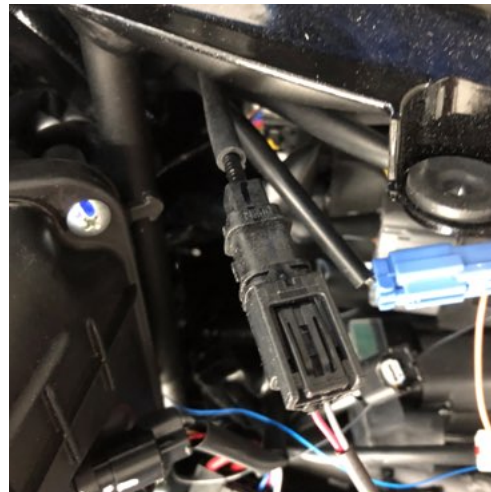

Connect the HM SR loom to rear wheel speed sensor plug.



Connect loom to rear brake light connector for switch power.



Connect loom to the negative terminal of the battery

Step 3:

Installing the HMGP-KA1712

The HM GP shifter can now be fitted and connected into the bikes coil, speed and RPM looms. We advise that the Earth lead is connected to the negative terminal of the battery.

**If you have any questions or
require any help, please call our
tech team on;**

TEL: +44 (0)1795 429168

Email: info@hmquickshifter.com