


FITTING INSTRUCTIONS


TO BE FITTED BY A QUALIFIED TECHNICIAN.

Yamaha R3 2015 STOCK – Secondary Alternator cover.
Part No. SP-320 Case cover

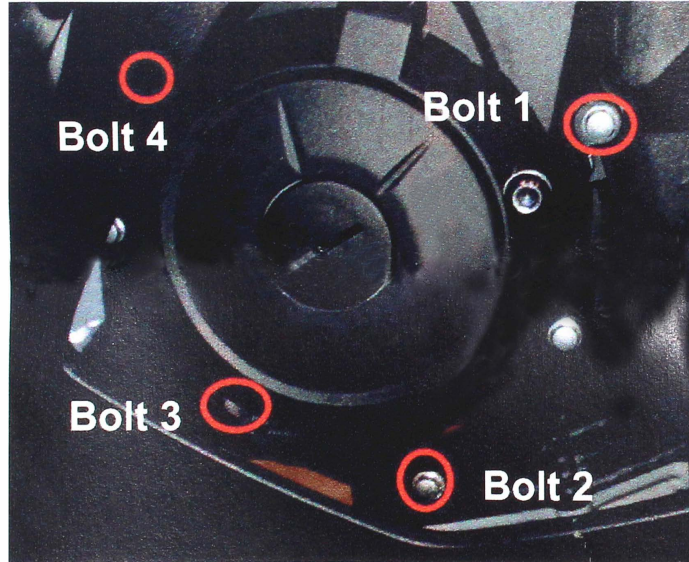

Bolt 1

M6X35 HHF:
10Nm

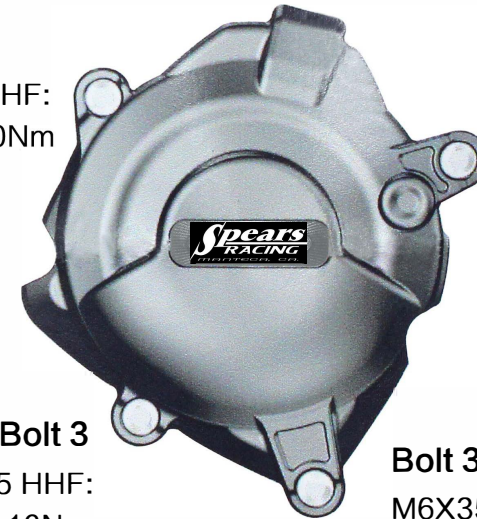

Bolt 2

M6X40 HHF:
10Nm

Bolt 3

M6X35 HHF:
10Nm

Bolt 3

M6X35 HHF:
10Nm

1. Remove Fairing.
2. Remove 4 existing bolt from the stock Alternator cover, shown as position Bolt 1, 2, 3 & 4. Note Bolt # 2 is the longest.
3. Place the Secondary Alternator Cover over the stock cover adding silver washer between new cover and stock cover.
4. Assemble 4 replacement bolt loosely in the correct position as shown.
5. Tighten bolts to a torque of 10Nm as per Manufacturer's recommendations. **DO NOT OVERTIGHTEN.**
6. Replace Fairing.